



old position of pipe removed
 concrete cut away approx 400mm square
Kordon Kollar
 as per drawing kd011
 to new pipe position

plan

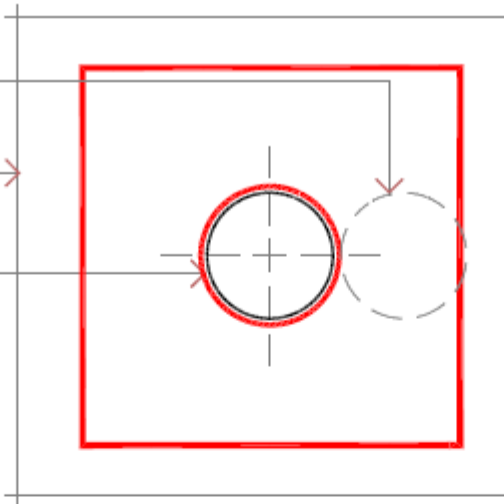


Remedial Kordon Kollar installation

- Step 1: - clean cut concrete 400mm min square - new pipe position centre of concrete cutout
 - Step 2: - as replacement moisture barrier install Kordon TMB & Kordon Kollar
 - Step 3: - pour concrete to AS2780
- note:
 as a secondary precaution we recommend treatment to the soil in the disturbed area with an approved termiticide ie PREMISE 2005C

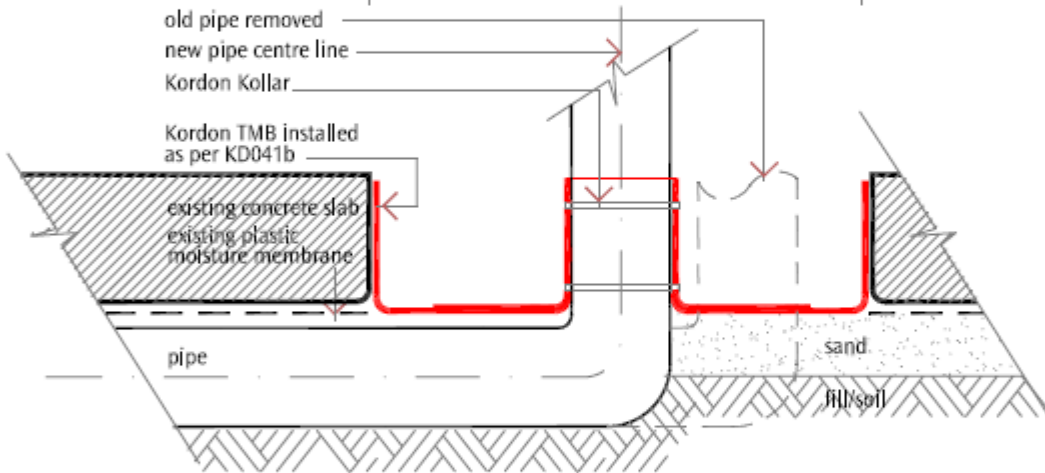

section before concrete pour.

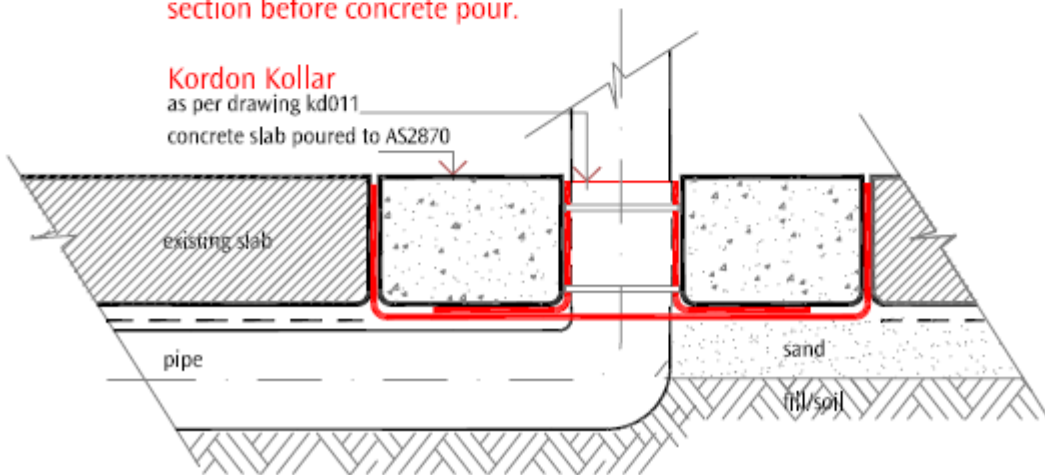

section after concrete pour



Kordon



kd072

Subject:

Remedial slab pipe penetration Kollar