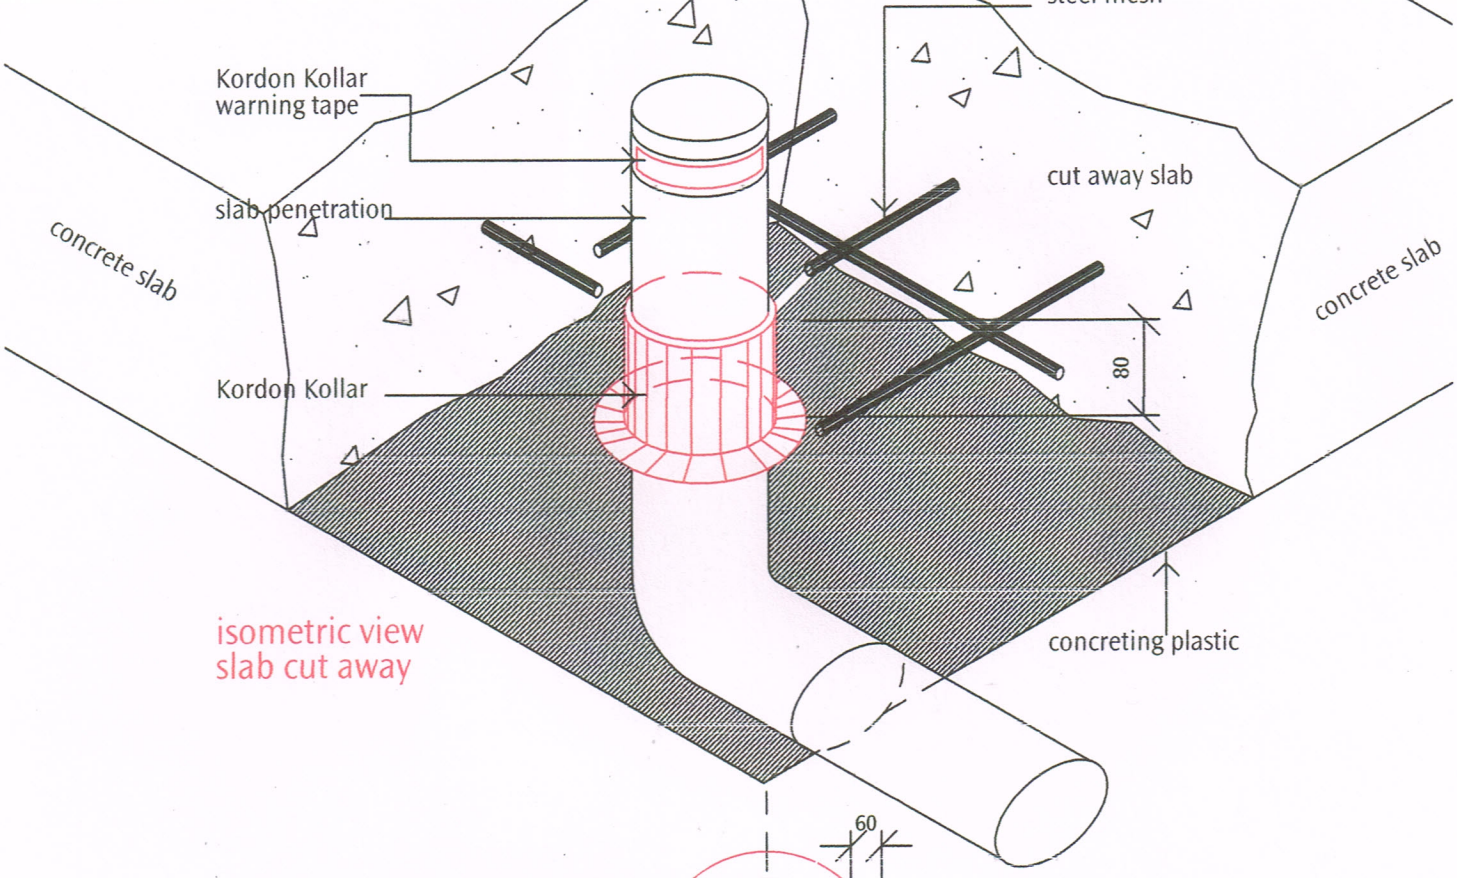

isometric view
slab cut away

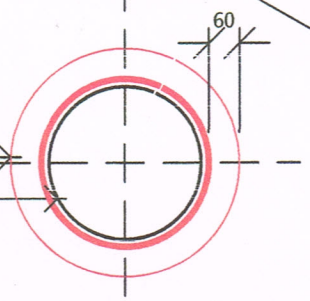

Kordon Kollar
100mm dia pipe

plan

Kordon Kollar installation

Step 1:
place Kordon Kollar over pipe
slide down mid depth of slab
Step 2:
secure first zip tie to base
of kollar, secure second zip tie
50mm higher then first
Step 3:
finish with a tape wrap at top
Step 4
place Kordon warning tape on pipe

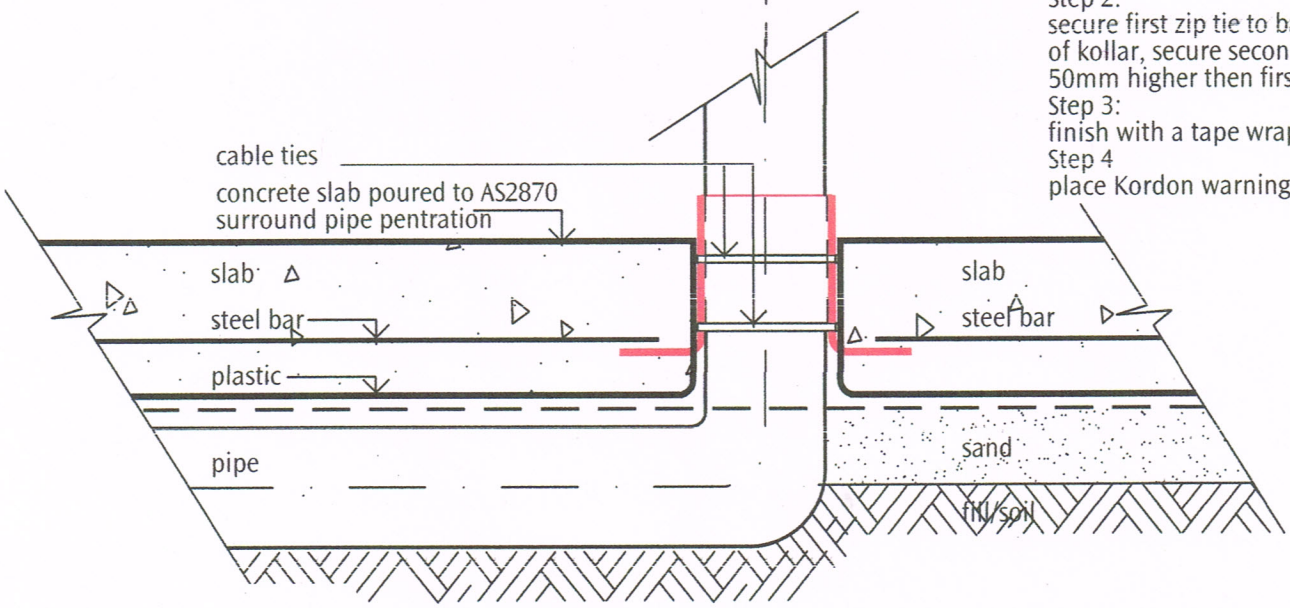

Kordon® Termite Barrier

Subject

Kordon Kollar MK III

AUSTRALIAN MADE

CODEMARK™
30001

Sheet No.
KD231a
Date.
AUG/15